KitchenAid®

COOKTOP PARTS

For Models:YKESC307HW6, YKESC307HS6, YKESC307HB6, YKESC307HT6
(White) (Black Stainless) (Black) (Biscuit)

30" Slide−In Range
DESIGNER STYLE
Convection Oven

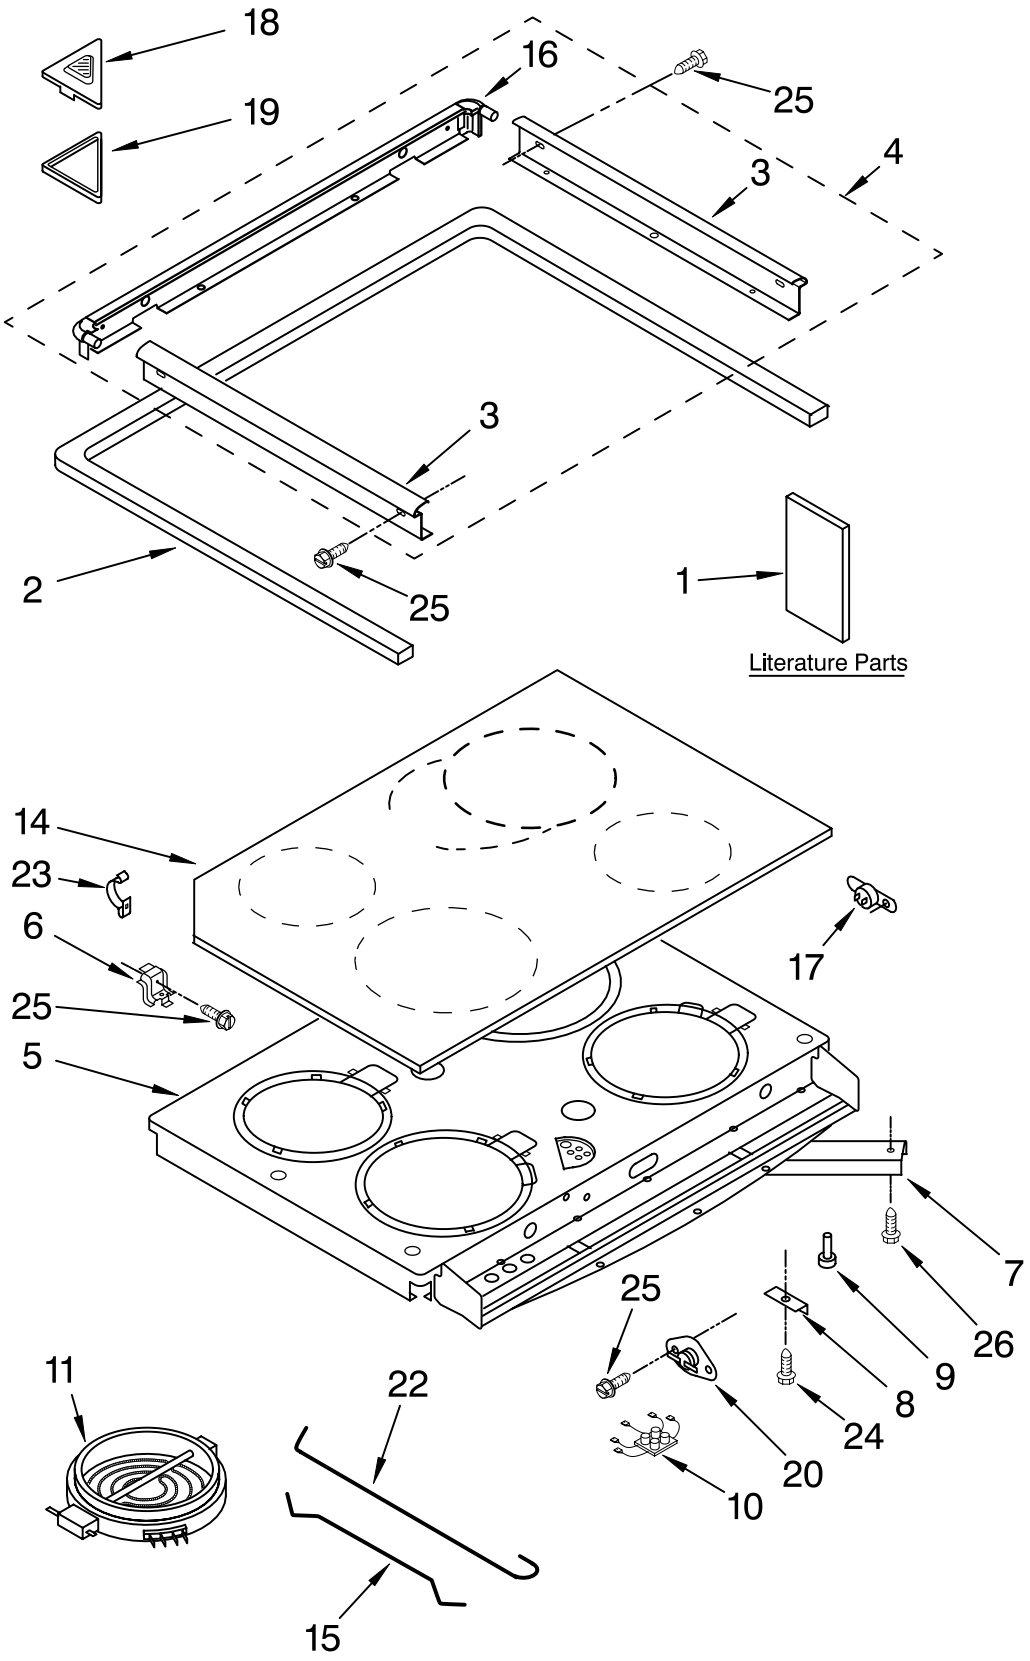

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP PARTS

For Models:YKESC307HW6, YKESC307HS6, YKESC307HB6, YKESC307HT6
(White) (Black Stainless) (Black) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT9752179	Installation Instructions
		Use & Care Guide
	LIT9753846	English
	LIT9753846F	French
		Smart & Easy Guide
	LIT9752686	English
	LIT9752687	French
	LIT9753027	Tech Sheet
	LIT9782170	Wiring Diagram
	LIT9752775	Template, Anti−Tip
	LIT3191638	Safer Cooking Tips
2	9754103	Gasket, Cooktop (Front & Sides)
3		Trim, Side
	9781828PW	White
	9781828PB	Black
	9781828PC	Biscuit
4		Frame, Cooktop
	9781832PW	White
	9781832PB	Black
	9781832PC	Biscuit
5	9752892	Support, Element
6	9751629	Bracket, Pivot
	9752003	Washer (2)
7	9781553	Brace, Support
8	9753691	Support Clips (4)
9		Bumper, Rubber
	9750969	White (4)
	9780771	Black (4)
10	9781936	Hot Light
11		Element, Surface
	8272564	1500W − LR
	9753997	2200W − RR
	8272566	1800W − RF
	8272563	1000/2500W − LF
14		Cooktop, Ceran
	9753711CW	White
	9753711CC	Biscuit
	9753711CB	Black
15	9781460	Rod, Small Ceran Element
16		Trim, Back (Incl. End Caps)
	9781831PW	White
	9781831PB	Black
	9781831PC	Biscuit
17	341196	Thermo−Disc
18	9751800	Vent, Cover
19	9751841	Gasket, Vent
20	9751984	Bimetal, Fan
22	9781459	Rod, Large Ceran Element
23	98997	Clip
24	9751871	Screw, 10−16 x 1
25	9780265	Screw, 10−16 x 3/8
26	9780272	Screw, 10−16 x 1/2

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Models:YKESC307HW6, YKESC307HS6, YKESC307HB6, YKESC307HT6

(White) (Black Stainless) (Black) (Biscuit)

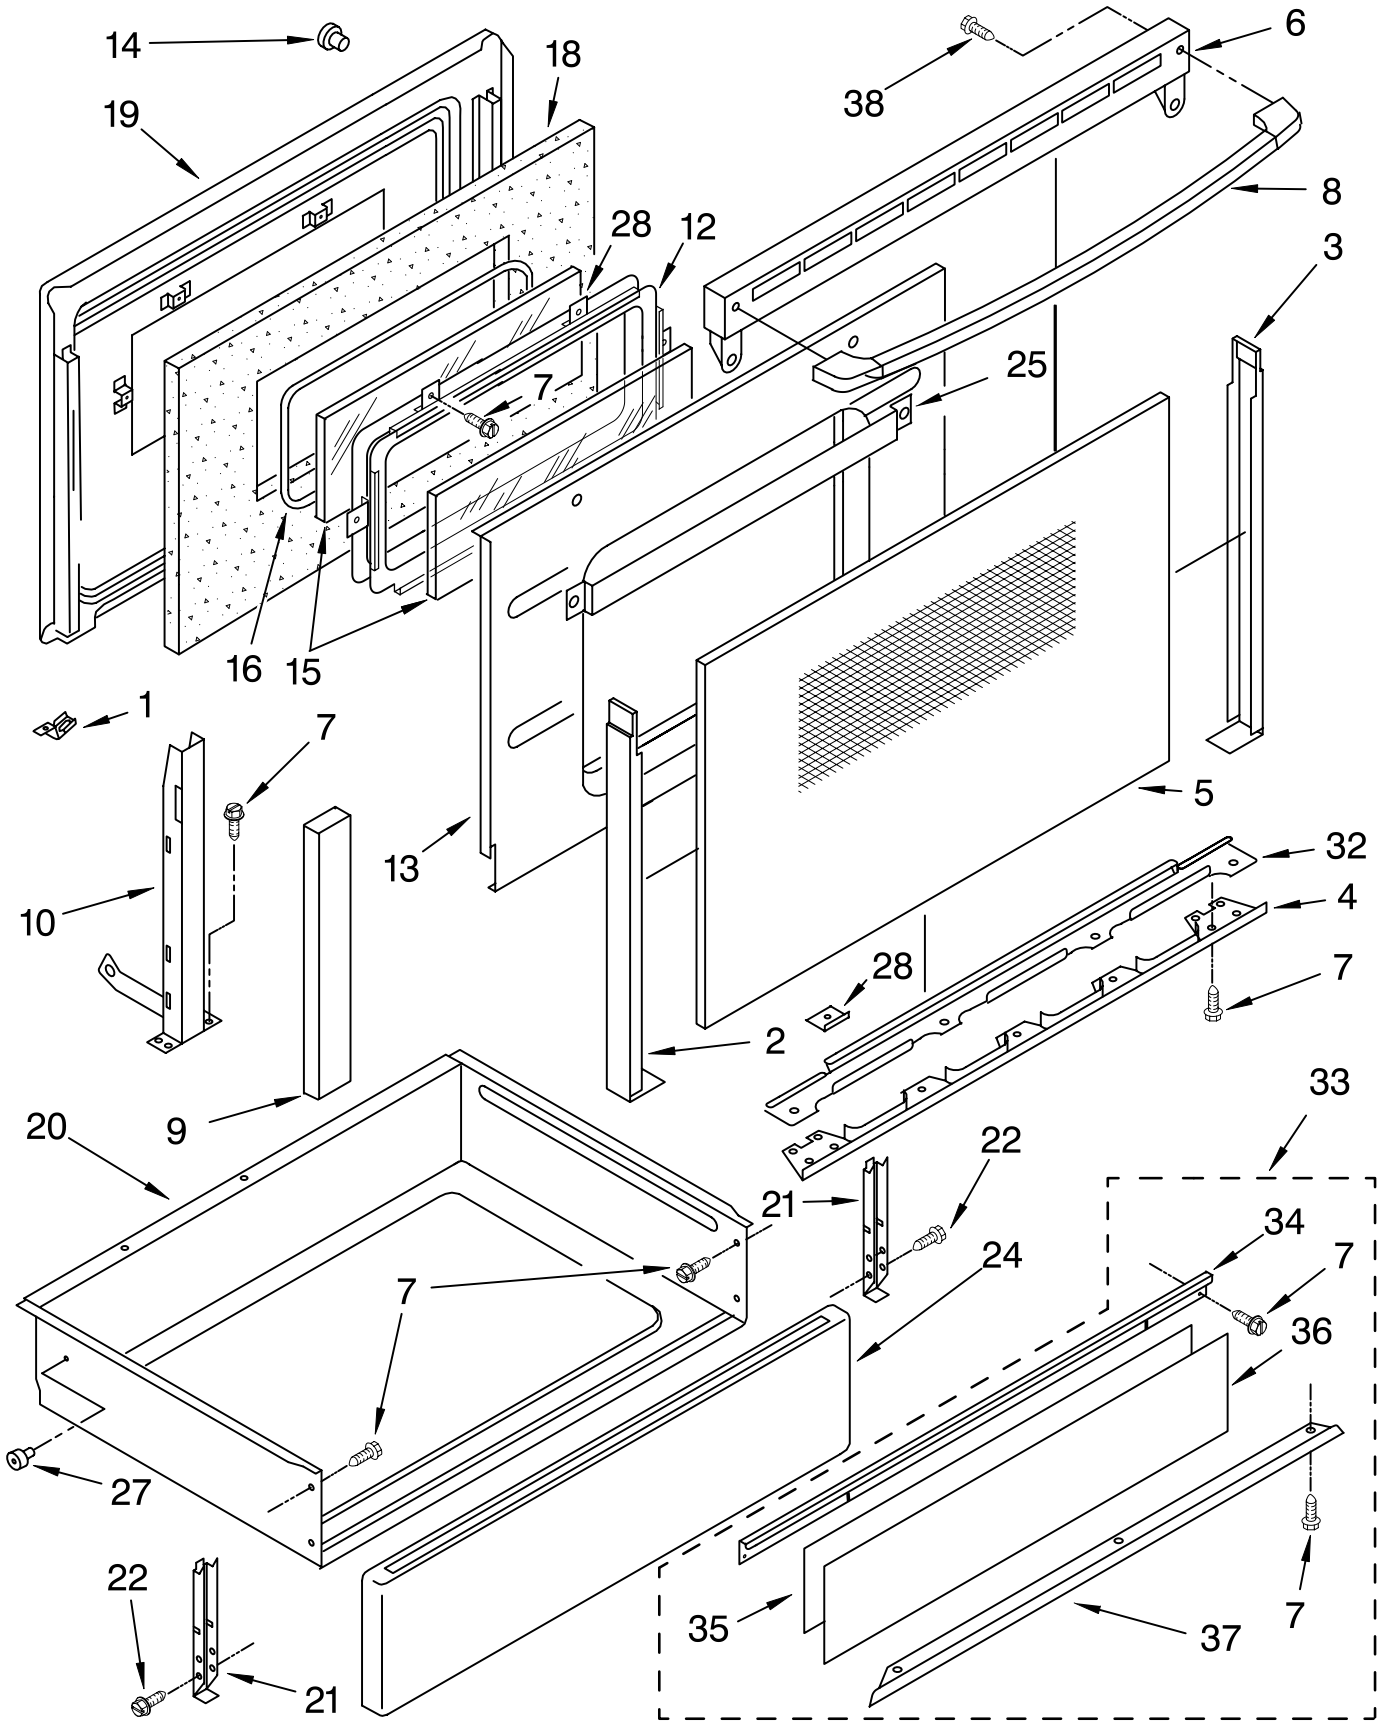

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Models:YKESC307HW6, YKESC307HS6, YKESC307HB6, YKESC307HT6

(White) (Black Stainless) (Black) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	9750676	Support, Door
2		Trim, Door−Left
	9782003PW	White
	9782003PB	Black
	9782003PC	Biscuit
3		Trim, Door−Right
	9782004PW	White
	9782004PB	Black
	9782004PC	Biscuit
4		Trim, Door Bottom
	9781209PW	White
	9781209PB	Black
	9781209PC	Biscuit
5		Glass, Door
	9781627PW	White
	9781627PB	Black
	9781627PC	Biscuit
6		Vent, Door
	9753498GW	White
	9753498GB	Black
	9753498GC	Biscuit
	9781659	Gasket, Door Vent
7	9780265	Screw, 10−16 x 3/8
		Vent Side
8		Handle, Door
	9780523PW	White
	9780523PB	Black
	9780523PC	Biscuit
9	9781449	Gasket, Door Glass (4)
10	9782033	Hinge, Door R or L
	90296	Clip
12	9781602	Frame, Window
13	9781586	Shield Door
14	9780771	Bumper, Rubber
15	9781593	Glass, Door (2)
16	9755177	Seal, Glass
18	9754006	Insulation
19	9781600GM	Liner, Door
20	9780583	Drawer & Roller
21	9750169	Bracket, Drawer
22	9780272	Screw, 10−16 x 1/2
24		Front, Drawer
	9782108PW	White
	9782108PB	Black
	9782108PC	Biscuit
	9782109PB	Stainless
25	9750693	Heat, Channel
27	423713	Support, Roller
28	9781502	Spacer, Door (8)
32	9781771	Steam, Deflector
33		(Stainless Steel Model Only)
34	9750614PB	Trim, Drawer−Top
35	9753329	Spacer
36	9754062	Panel, Drawer (Stainless)
37	9750613PB	Trim, Drawer−Bot
38	9781072	Screw, 10−24 x 3/8

OVEN CHASSIS PARTS

For Models:YKESC307HW6, YKESC307HS6, YKESC307HB6, YKESC307HT6

(White) (Black Stainless) (Black) (Biscuit)

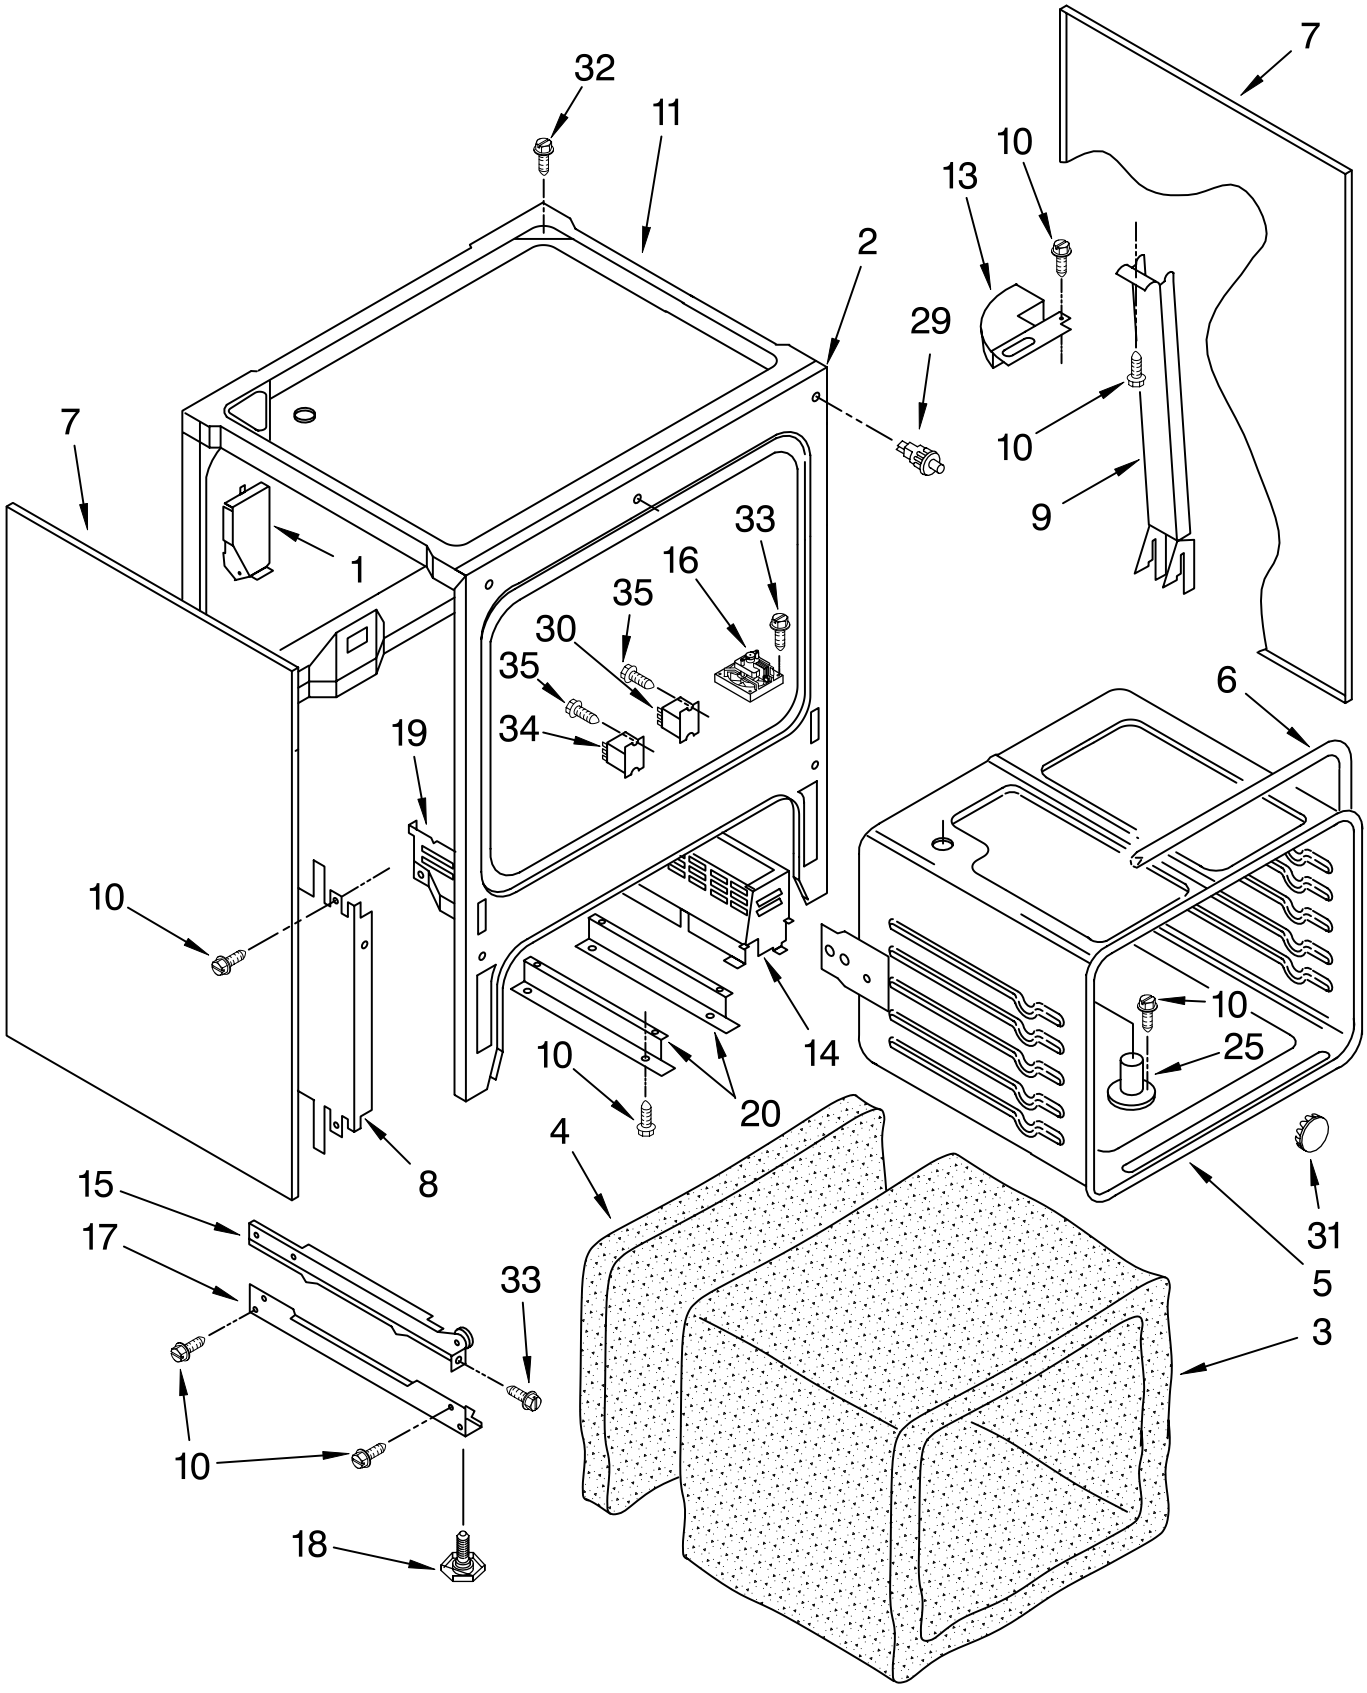

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN CHASSIS PARTS

For Models:YKESC307HW6, YKESC307HS6, YKESC307HB6, YKESC307HT6

(White) (Black Stainless) (Black) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	9751350	Vent Box, Oven
2	9750514GM	Chassis, Front
3	9754003	Insulation, Wrap
4	9754011	Insulation, Rear
5	9753744GM	Oven Liner
6	9755179	Gasket Oven
7		Oven , Side L or R
	9781907PW	White
	9781907PB	Black
	9781907PC	Biscuit
8	9780664	Shield, Insulation
9	9751789	Fan Duct, Side
10	9780265	Screw, 10−16 x 3/8
11	9752637	Burner Box
13	9751653	Duct, Top
14	9751060	Support, Fan
15	9750223	Drawer Rail, Left
	9750224	Drawer Rail, Right
16	9751020	Motor, Fan
17	9750147	Bottom Rail (2)
18	312701	Foot, (4)
19	9782005	Hinge, Door L or R
20	9781904	Support Rail, Pan
25	9753091	Vent, Tube
29	9781581	Door Switch
30	9751948	Relay
31	9780578	Button, Plug
32	9780275	Screw, 8−18 x 3/8
33	9751808	Screw, 8−18 x 1/2
34	9752149	Relay, Cooktop
35	9780270	Screw

CONTROL PANEL PARTS

For Models:YKESC307HW6, YKESC307HS6, YKESC307HB6, YKESC307HT6
(White) (Black Stainless) (Black) (Biscuit)

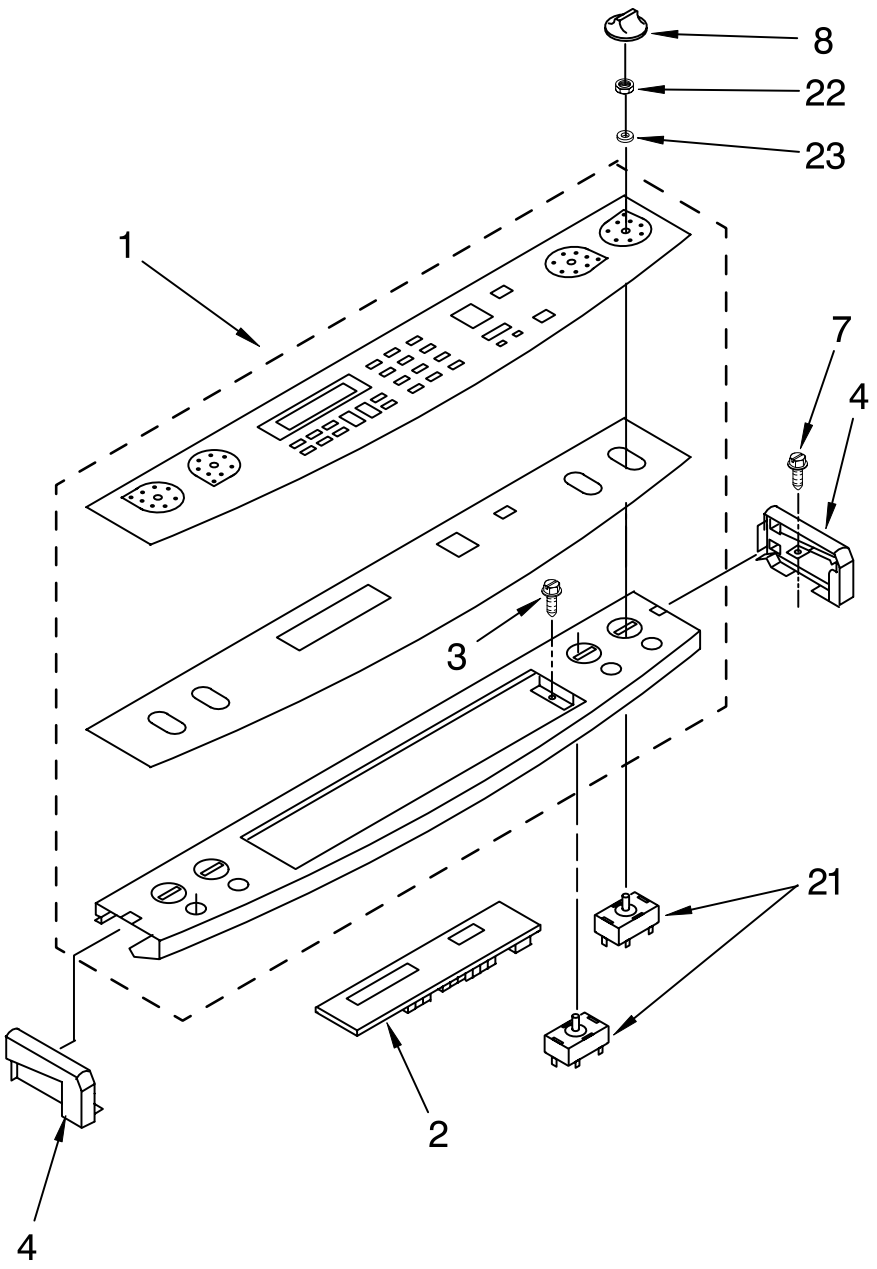

Illus. No.	Part No.	DESCRIPTION
1		Console, Glass
	9781969CW	White
	9781969CB	Black
	9781969CC	Biscuit
2	9781980	Timer, Electronic
3	9780271	Screw, 8−18 x 1/4
4		End Cap
		(Right Hand)
	9751040FW	White
	9751040FB	Black
	9751040FC	Biscuit
		(Left Hand)
	9751039FW	White
	9751039FB	Black
	9751039FC	Biscuit
7	9780265	Screw, 10−16 x 3/8
8		Knobs, Control
	9750372FW	White
	9750372FF	Black
	9750372FC	Biscuit
21		Switch, Infinite
	9751364	1500W − LR
	9751363	1800W − RF
	9751362	2200W − RR
	9755175	1000/2400W − LF
22		Nut, Mounting
	422617	Single Element
	9751711	Dual Element
23	9781455	Seal, Switch (4)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models:YKESC307HW6, YKESC307HS6, YKESC307HB6, YKESC307HT6
(White) (Black Stainless) (Black) (Biscuit)

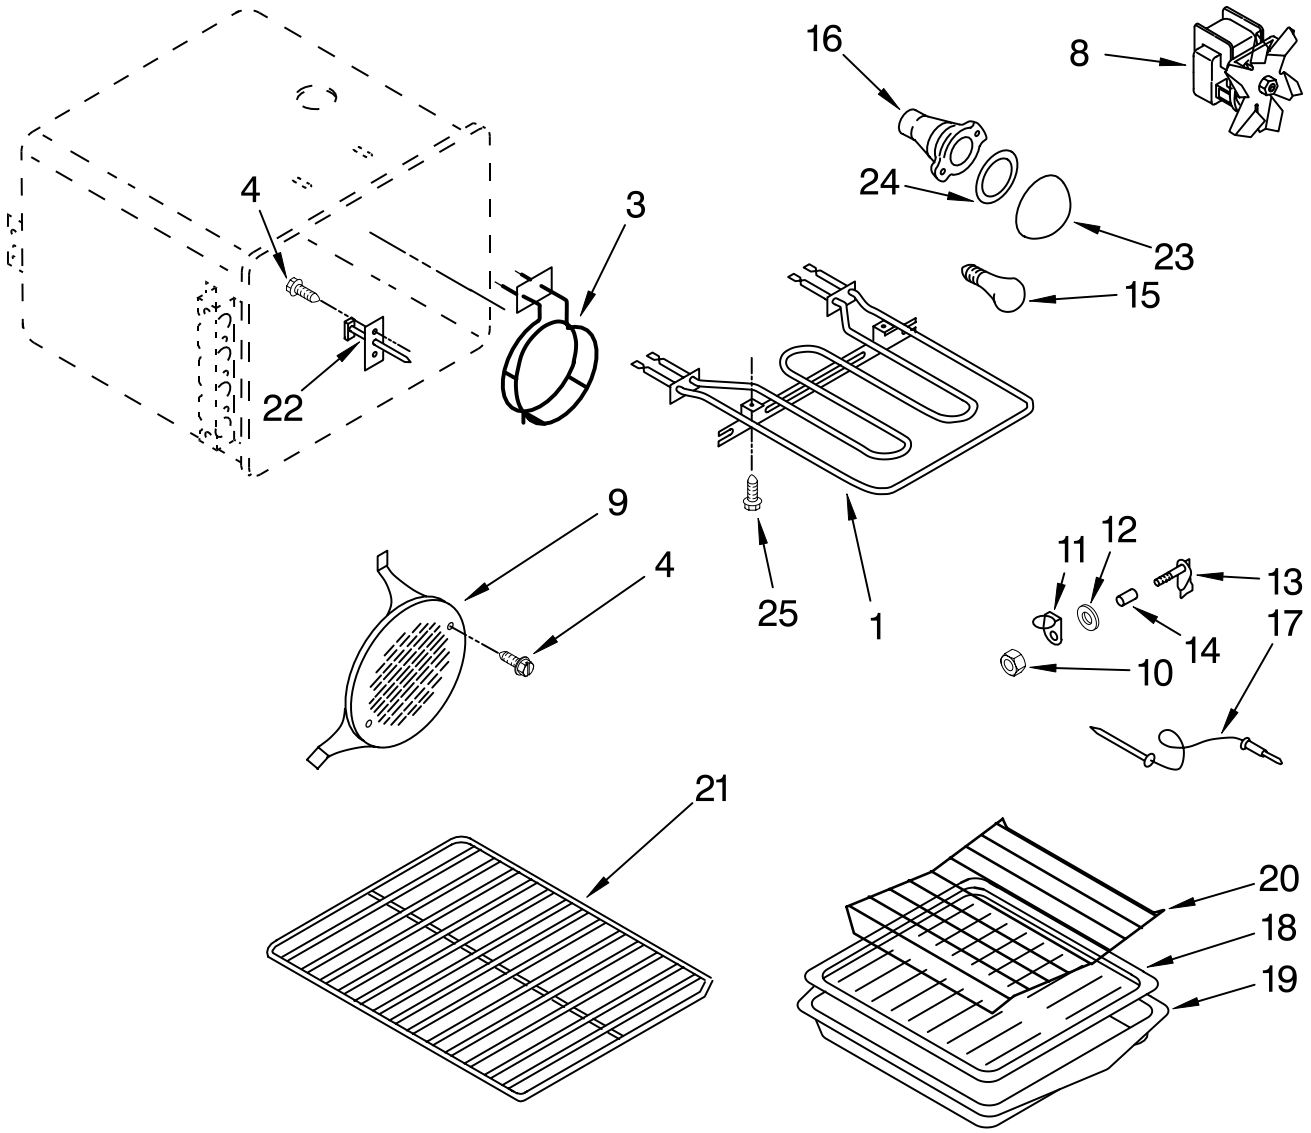

Illus. No.	Part No.	DESCRIPTION
1	9750967	Element, Broil
3	9751447	Element, Convection
4	9781509	Screw, 8−32 x 3/8
8	9781543	Assembly, Fan
	9780272	Screw (3) 10 x 1/2
9	9751904GM	Baffle, Convection
	9781509	Screw (2)

Illus. No.	Part No.	DESCRIPTION
10	4167277	Lock−Nut, Cvr.Jack
11	4167266	Jack Cover
12	305289	Gasket
13	4173575	Receptacle, Probe
14	3179672	Spacer, Tubing
15	8935	Bulb, Oven
16	9781050	Light, Socket
17	3150144	Probe

Illus. No.	Part No.	DESCRIPTION
18	420104GM	Grill, Broiler
19	420101GM	Pan, Broiler
20	9750827	Rack, Roasting
21	9750823	Rack, Standard (3)
22	9782081	Sensor
23	9781049	Lens, Light
24	3184533	Gasket, Lens
25	340184	Screw, 10−16 x 1.5

REAR CHASSIS PARTS

For Models:YKESC307HW6, YKESC307HS6, YKESC307HB6, YKESC307HT6
(White) (Black Stainless) (Black) (Biscuit)

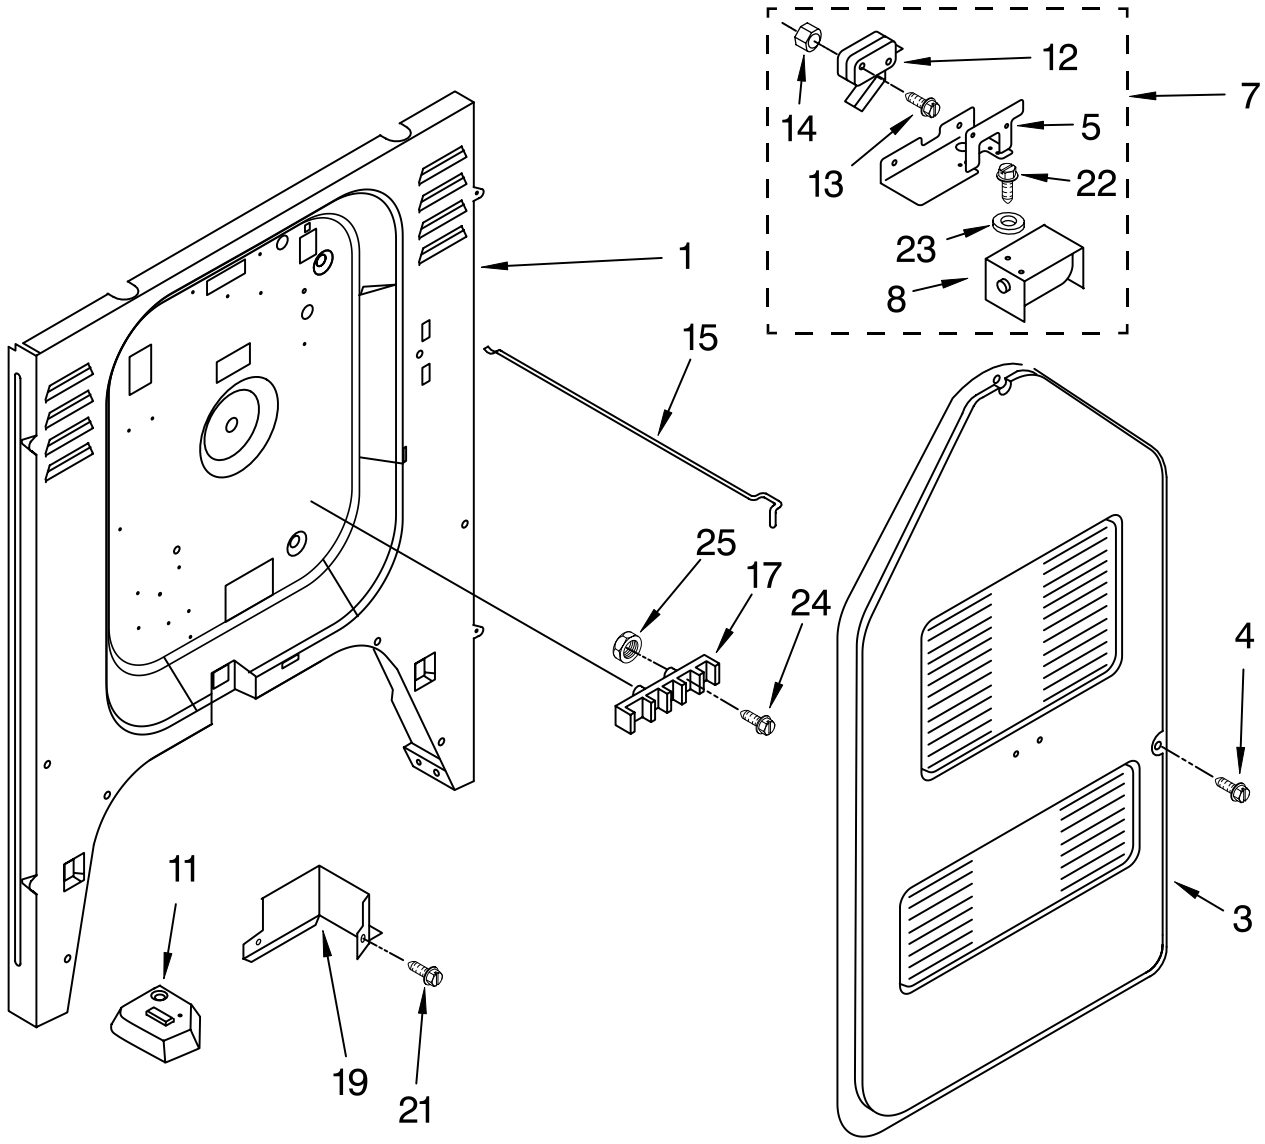

Illus. No.	Part No.	DESCRIPTION
1	9751051	Back Panel,Chassis
3	9751353	Panel, Rear Cover
4	423247	Screw
5	9751418	Bracket, Lock
7	9782104	Oven Lock Assembly
8	9751590	Solenoid
11	9753413	Block, Balance

Illus. No.	Part No.	DESCRIPTION
12	9782106	Switch, Interlock
13	9750887	Screw, 4−40 x 1
14	9750888	Nut
15	9750523	Rod, Lock
17	258076	Terminal Block
	313660	Clip

Illus. No.	Part No.	DESCRIPTION
19	9751798	Back, Vent
21	9780272	Screw, 10−16 x 1/2
22	422222	Screw,10−32 x 5/16
23	424238	Washer, #10 Lock
24	98884	Screw, 10−16 x 1
25	112432	Nut, 10−32 Hex

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

HIDDEN BAKE PARTS

For Models:YKESC307HW6, YKESC307HS6, YKESC307HB6, YKESC307HT6
(White) (Black Stainless) (Black) (Biscuit)

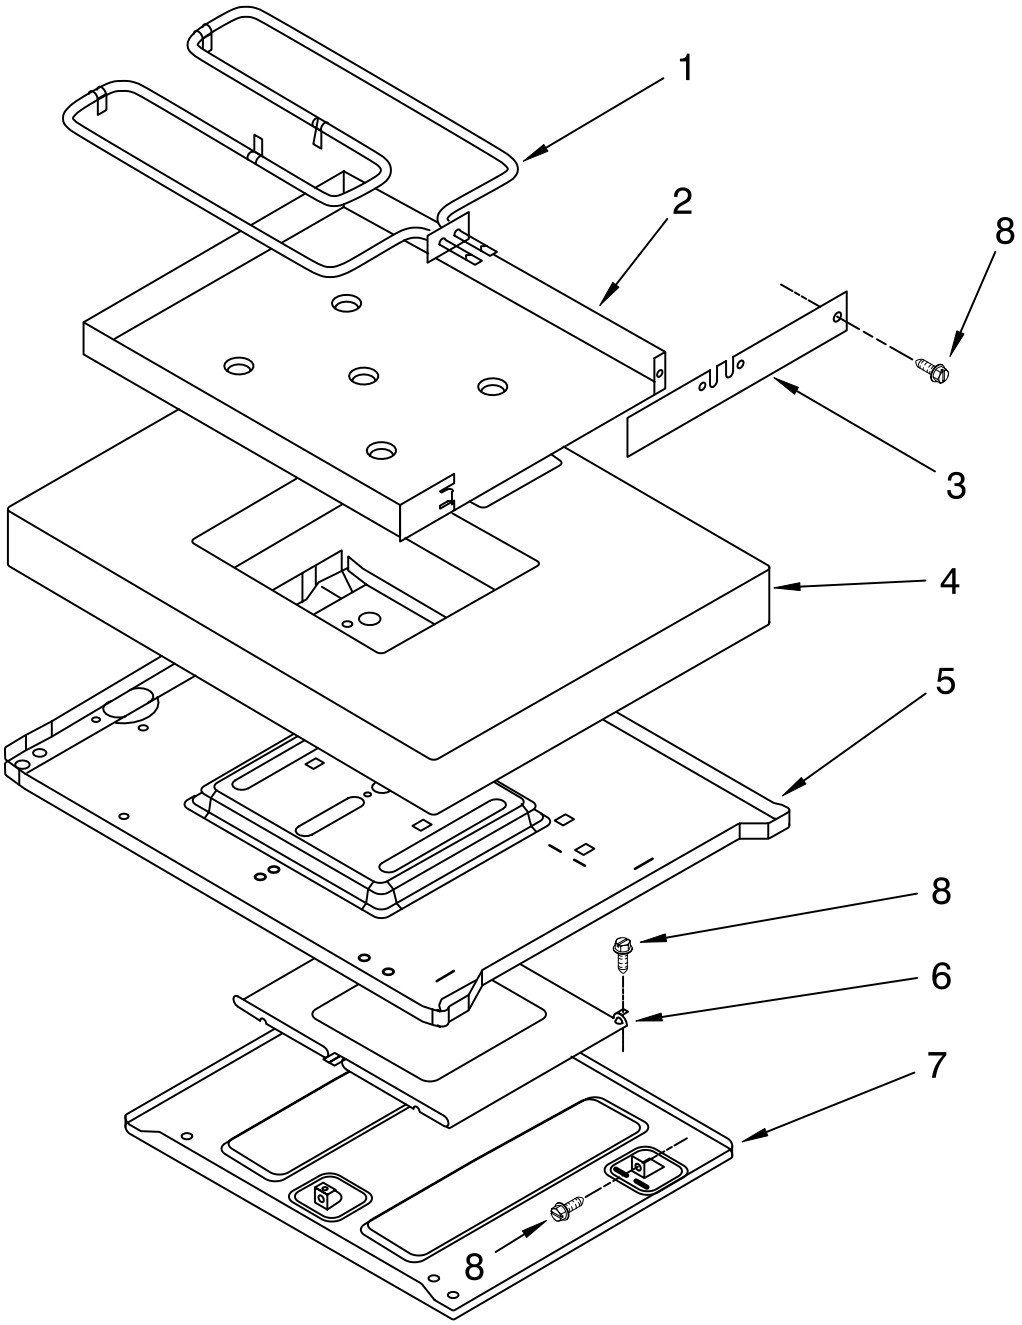

Illus. No.	Part No.	DESCRIPTION
1	9752294	Element, Bake
2	9782048	Pan, Hidden Bake
3	9782049	Cover, Pan
4	9754005	Insulation
5	9752735	Retainer, Insulation
6	9782050	Plate, Reflector
7	9782051	Shield
8	9780265	Screw, 10−16 x 3/8

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models:YKESC307HW6, YKESC307HS6, YKESC307HB6, YKESC307HT6
(White) (Black Stainless) (Black) (Biscuit)

Illus. No.	Part No.	DESCRIPTION

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150°c
242820	Wire, Black 14 Ga. 150°c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242829	Wire, Red 12 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242826	Wire, White 14 Ga. 150°c
242827	Wire, Yellow 14 Ga. 150°c
242832	Wire, Yellow 14 Ga. 200°c

PAINT, TOUCH−UP (1/2oz.)

72017	White
72107	Almond
511873	White Porcelain (2 Oz.)
4392899	Biscuit

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
285006	Superior Black
206922	Primer (White)
4392901	Biscuit

PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch−Up Self−Clean (1/2 Pt.)

CLEANER, COOKTOP

3184477	Glass Cleaner
3183488	Scraper
9753543	Cooktop Cleaner

ACCESSORIES

241430	Foil, Aluminum Oven (18" X 25')

LUBRICANT

261582	Grease

ANTI−TIP KIT

9751745	Anti−Tip Kit

WIRING HARNESS PARTS

9782187	Harness, Wire (SI/Main/Conv)
9782141	Harness, Wire (Control)
9781656	Harness, Wire (L−2)
9782183	Harness, Wire (Cooktop)
9781769	Harness, Wire (Front Console)
9750376	Harness, Wire (Door Switch)
9782080	Harness, Wire (Meat Probe)
9753683	Harness, Wire (Hidden Bake)
9753374	Harness, Wire (Dual Oven Light)
9782142	Harness, Wire (Relay, CND.)
9782182	Wire, Jumper
9751868	Grommet, Harness
20082084	Tie, Wire
98997	Clip, Wire
90016	Clip, Wire
9781287	Cord, Power
9750984	Cable Hanger